

USB-Kabel	UC-E1	UC-E2	UC-E3	UC-E4	UC-E5	UC-E6	UC-E7	UC-E10	UC-E12	UC-E13
Kamera										
E775		X								
E885	X									
E995	X									
E2000					X					
E2100						X				
E2200						X				
E2500			X							
E3100						X				
E3200						X				
E3500			X							
E3700						X				
E4100						X				
E4200						X				
E4300	X									
E4500	X									
E4600						X				
E4800						X				
E5000	X									
E5100						X				
E5200						X				
E5400	X									
E5600						X				
E5700	X									
E5900						X				
E7600						X				
E7900						X				
E8400						X				
E8700	X									
E8800						X				
SQ				X			X			
S1								X		
S2								X		
S3								X		
S4						X				
S5								X		
S6								X		
S7c								X		
S8								X		
S9						X				
S10						X				
S50c									X	
S51									X	
S51c									X	
S52										X
S52C										X
S60						X				
S200						X				
S220						X				
S230						X				
S500						X				
S510						X				
S560						X				
S610										X
S610C										X
S620						X				
S630						X				
S700									X	
P1						X				
P2						X				
P3						X				
P4						X				
P50						X				
P80						X				
P90						X				
P5000						X				
P5100						X				
P6000						X				
L1						X				
L2						X				
L3						X				
L4						X				
L5						X				
L10						X				
L11						X				
L12						X				
L14						X				
L15						X				
L19						X				
L20						X				
L100						X				
L101						X				

UC-E1, UC-E3, UC-E5 & UC-E7 nicht mehr lieferbar

UC-E2 nur auf Bestellung